

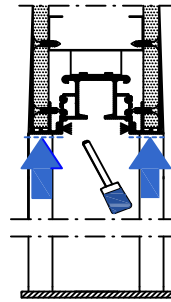


### SINGLE DOORS

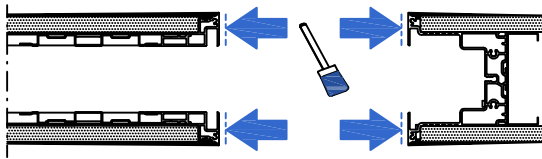

### DOUBLE DOORS

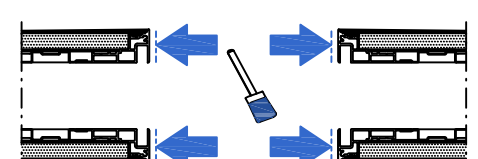


### PAINING ALUMINIUM FRAME EDGES


CLEAN AWAY ANY PLASTERWORK RESIDUES FROM THE ALUMINIUM FRAME. APPLY ONE COAT OF A SUITABLY DILUTED PRIMER

**CAUTION: AVOID EXCESSIVE PAINT THICKNESSES AND ACCUMULATIONS.**


### PAINING ALUMINIUM PROFILE BARS FOR WOODEN DOORS

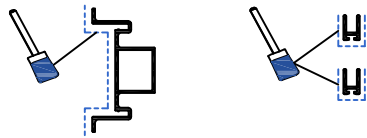


### PAINING ALUMINIUM PROFILE BARS FOR WOODEN DOORS

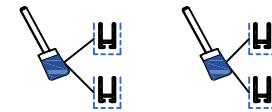

### PAINING ALUMINIUM PROFILE BARS FOR DOORS (OPTIONAL)

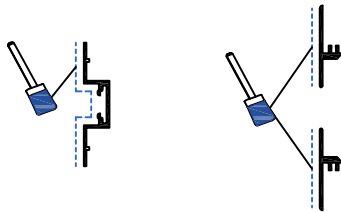

### PAINING ALUMINIUM PROFILE BARS FOR DOORS (OPTIONAL)

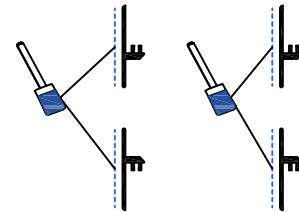

## PAINING DOORS WITH PRIMER (OPTIONAL)

CAREFULLY CLEAN THE DOOR AND FINISH WITH A LIGHT COAT OF PAINT.

**IMPORTANT: ALL FINISHES APPLIED (E.G. PAINTING, WALLPAPER, ETC) MUST ALWAYS BE CARRIED OUT EQUALLY ON BOTH SIDES OF THE DOOR.**

**CAUTION: AVOID EXCESSIVE PAINT THICKNESSES OR ACCUMULATIONS THAT COULD AFFECT CORRECT DOOR MOVEMENT.**

